

FILMCITY

Flylite-4 Portable Mini 4ft Jib Crane

(FC-FLT-4)

INSTRUCTION MANUAL



All rights reserved

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

INTRODUCTION

Filmcity’s spectacularly remarkable Flylite-4 Portable Mini Jib blends style and functionality into a masterfully designed gizmo that brings your art into stunning realism. An inherently graceful way to get those immaculate and elegant shots with enduring comfort.


IN THE BOX

Please inspect the contents of your shipped package to ensure you have received all that is pictured and listed below.



ASSEMBLING OF FLYLITE-4 PORTABLE MINI 4FT JIB CRANE

- Remove the wing nuts from upper & lower jib arm in order to attach camera mounting bracket.

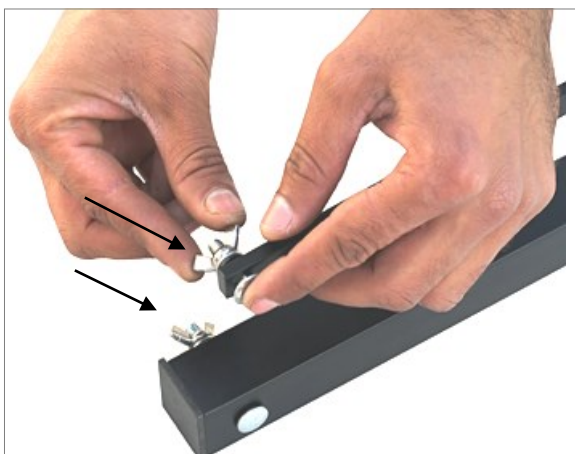

- Then attach the bracket to both the arms & tighten both the wing nuts to secure.



- Remove the marked screw, Insert the Handle and tighten it with wing nut to secure.




- Attach the LCD mounting Bracket to U-Fork & secure with the wing nut .



U-Fork of Flylite-4 jib has standard 1/4" thread settings to mount the jib on any Tripod Stand.

- Attach the quick release plate of your tripod head in order to attach the jib on the Tripod Stand.
- Mount the jib on Tripod and secure it properly. **(Stand & Tripod Head is NOT included).**

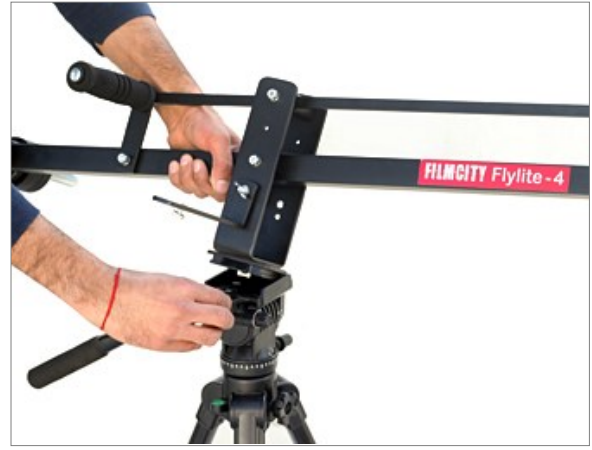

- Now attach the camera on camera mounting bracket and secure it with provided screw.



- Then attach the Weight Rod & Counter Weights (**NOT Included**) as per your requirement..
And then attach the provided weight stoppers.



Exclusive of Weight Discs

- Attach LCD Monitor (**NOT Included**) on LCD Mounting Bracket and secure it with screw properly.



YOUR FILMCITY FLYLITE-4 PORTABLE MINI JIB
ALL DRESSED UP AND GOOD TO GO



(EXCLUSIVE of Tripod Stand, Fluid Head, LCD Monitor, Counter weights & Camera)

WARRANTY

We offer a limited time warranty for our products. For Mechanical products we provide a 6 month warranty & for electronic products we provide a 3 month warranty from the date of purchase.

We will repair or replace your product, free of charge, in the event of a defect in materials or craftsmanship obtained during normal use or handling based on the user manual. Please note that we will not cover any shipping costs for returning the product to us. If any VAT or import duties are applied to the return, we will also charge these costs to the customer.

The warranty does not include, by the way of example, damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product , or service by anyone other than our company.

We are not liable for incidental or consequential damages resulting from the use of the unit or occurring due to any breach of this warranty.

Replacement parts of the product will be provided at nominal cost (covering the cost price of the replacement parts only) to the customers after the Warranty Period has expired. We will cover the complete cost of sending replacement parts within the warranty period. After that, Nominal cost of the product & Actual shipping cost will be charged.

Do not send the unit to us without first getting a response and getting the approval to send back the item.

In case of any kind of dissatisfaction, we urge you to Contact us immediately and we shall do our best to help you out.

For any other assistance you can reach us via email.